





- (GB)** Operating Instructions
- (D)** Bedienungsanleitung
- (F)** Mode d'emploi
- (E)** Instrucciones de uso
- (RUS)** Руководство по эксплуатации
- (I)** Istruzioni per l'uso
- (NL)** Gebruiksaanwijzing
- (GR)** Οδηγίες χρήσης
- (PL)** Instrukcja obsługi
- (H)** Használati útmutató
- (CZ)** Návod k použití
- (SK)** Návod na použitie
- (P)** Manual de instruções
- (TR)** Kullanma kılavuzu
- (RO)** Manual de utilizare
- (S)** Bruksanvisning
- (FIN)** Käyttöohje

SICHTKRAFT®

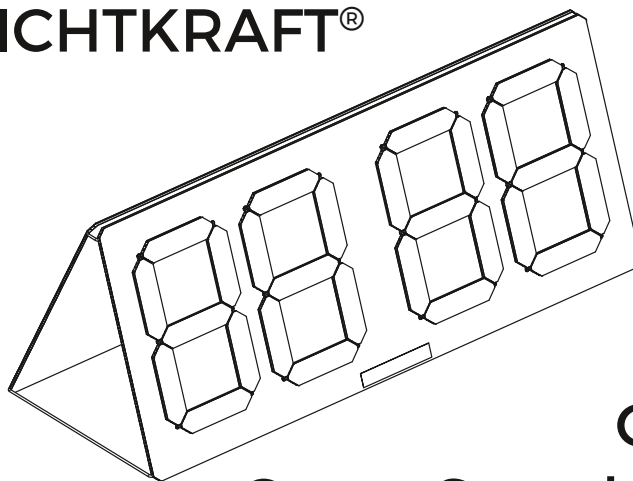



GS4D
Game Scoreboard

SICHTKRAFT Game Scoreboard GS4D - 0700811563212 - 01/2018 - Rev.1

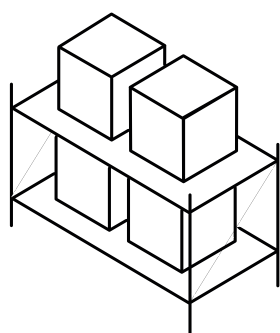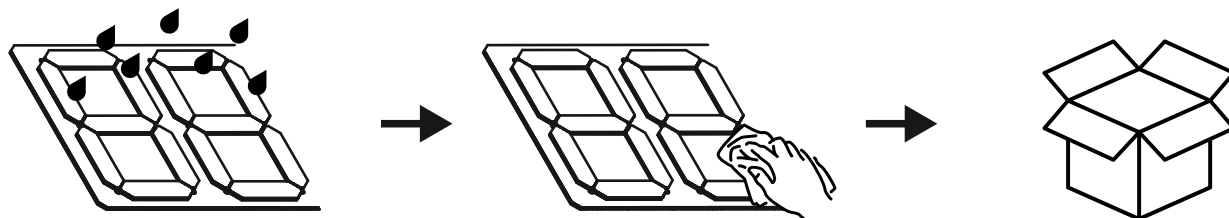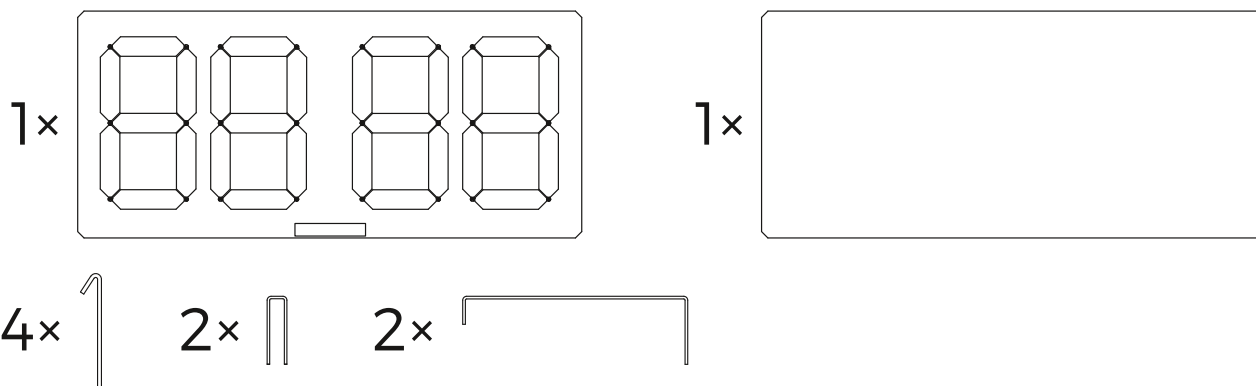


+ 50 °C / 122 °F


± 0 °C / 32 °F

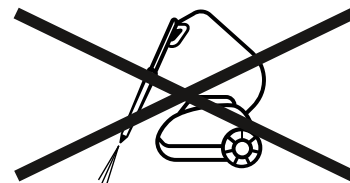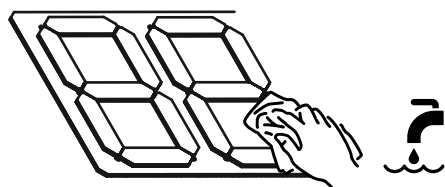


1

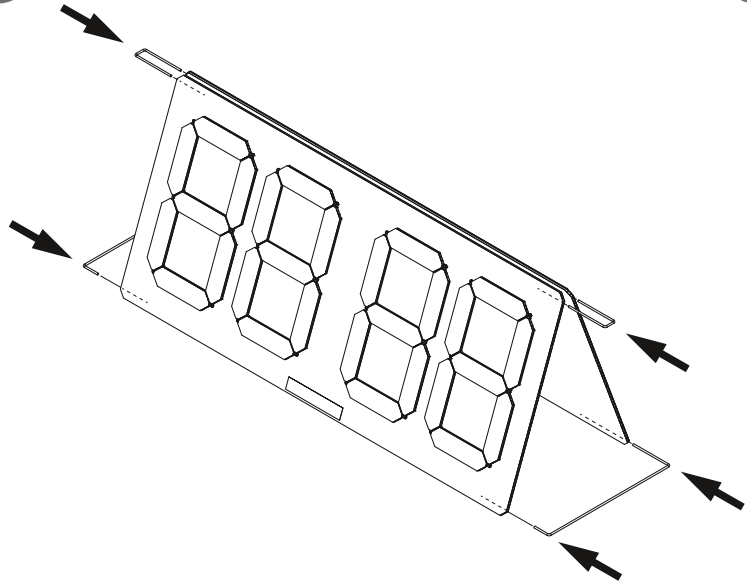


2

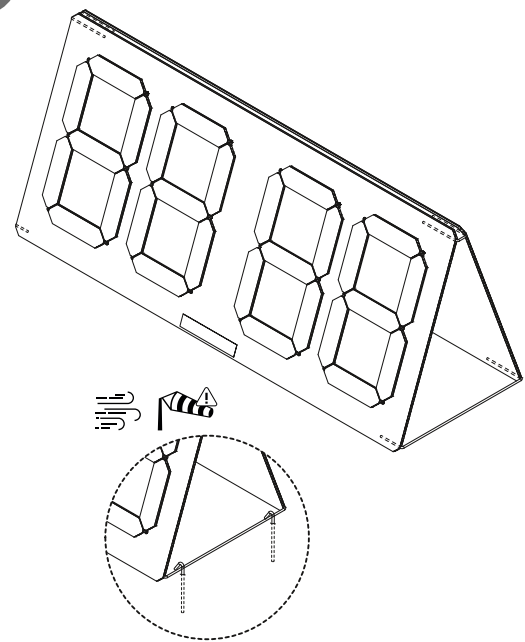


3

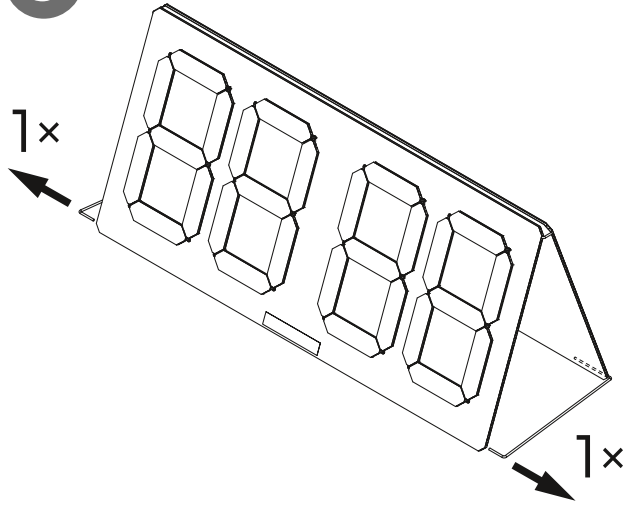

4

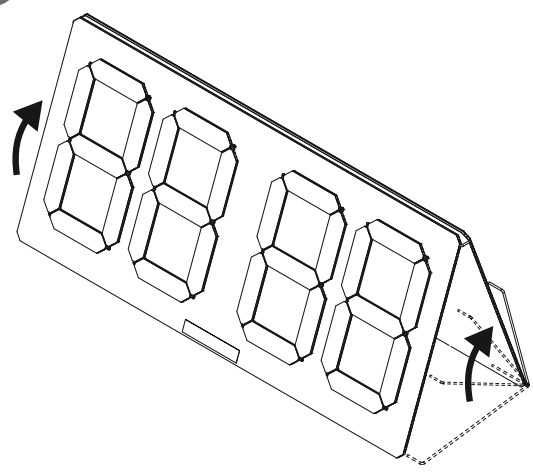

5

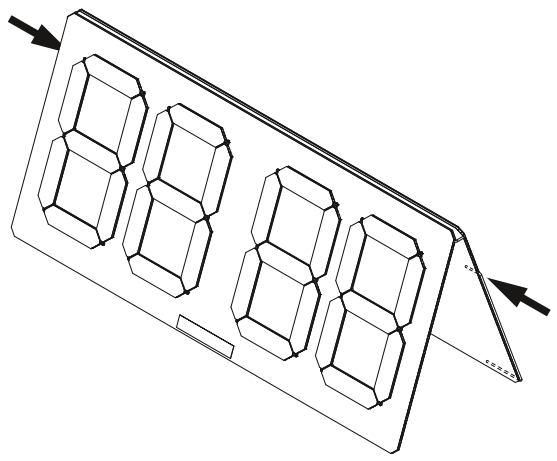

6

